


BWL-LL CORE BARREL

KUVAWALA 'LL' WIRELINE CORE BARRELS WITH LANDING INDICATOR

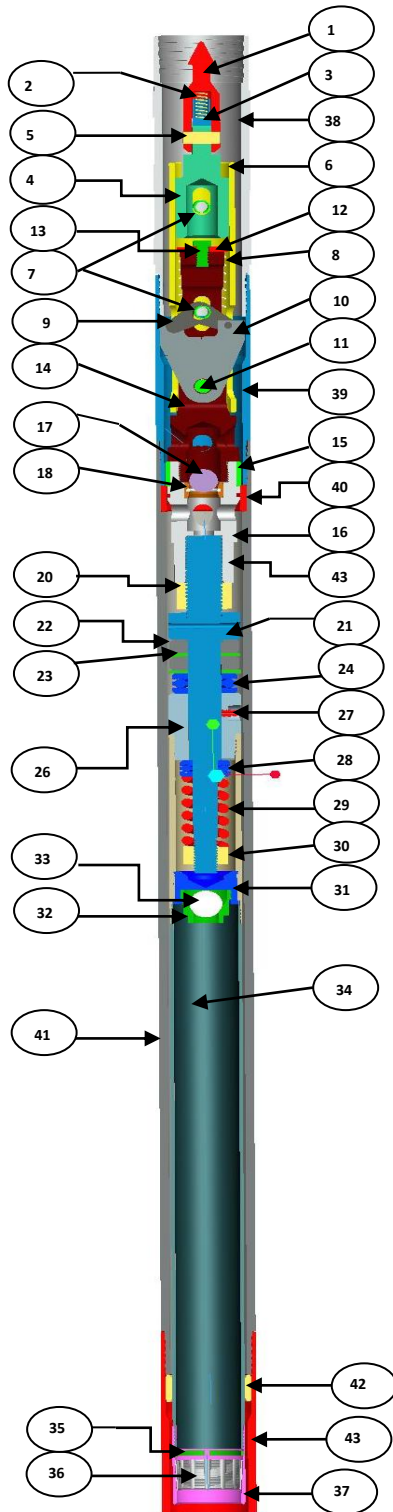

	ITEM DESCRIPTION	PART NUMBERS
1-39	BWL-LL CORE BARREL 3.0m / 10 ft	14-00-500
1-39	BWL-LL CORE BARREL 1.5m / 5 ft	14-00-510
1-37	BWL-LL INNER TUBE ASSEMBLY 3.0m / 10 ft	14-00-505
1-37	BWL-LL INNER TUBE ASSEMBLY 1.5m / 5 ft	14-00-515
1-33	BWL-LL HEAD ASSEMBLY	14-00-520
1	SPEARHEAD POINT	16-01-001
2	COMPRESSION SPRING	16-01-004
3	DETENT PLUNGER	16-01-003
4	BWL POINT BODY	14-01-002
5	SOLID DOWELL 7/16" x 1"	16-01-005
6	BWL-LL CASE LATCH	14-05-006
7	BWL SPRING DOWELL 3/8" X 1 5/8" - 2 NOS.	14-01-011
8	BWL-LL LATCH COMPRESSION SPRING	14-05-012
9	BWL-LL LINK - 2 NOS.	14-05-009
10	BWL-LL LATCH - 2 NOS.	14-05-008
11	BWL SOLID PIN 3/8" X 1 1/2"	14-01-010
12	BWL-LL WASHER	14-05-011
13	WL-LL HEX BOLT	16-05-010
14	BWL-LL UPPER BODY LATCH	14-05-007
15	BWL-LL LANDING SHOULDER	14-05-015
16	BWL-LL LOWER BODY LATCH	14-05-013
17	STAINLESS STEEL BALL 22 mm	16-05-017
18	LANDING INDICATOR BUSH	16-05-015
20	BWL HEX NUT 7/8" 9TPI	14-01-013
21	BWL ADJUSTING SPINDLE ASSEMBLY	14-01-012
22	BWL SHUT OFF VALVE - 2 NOS.	14-01-014
23	BWL VALVE ADJUSTING WASHER - 2 NOS.	14-01-015
24	BWL THRUST BEARING	14-00-016
26	BWL BEARING SPINDLE K20	14-01-018
27	GREASE FITTING	16-01-019
28	BWL HANGER BEARING	14-00-016
29	BWL COMPRESSION SPRING	14-01-021
30	BWL NYLOCK NUT	14-01-022
31	BWL-LL INNER TUBE CAP ASSEMBLY	14-01-023
32	BWL-LL INNER TUBE CAP VALVE BODY	14-01-023A
33	STAINLESS STEEL BALL 22 mm	16-05-017
34	BWL INNER TUBE 1.5m / 5 ft	14-01-025
34	BWL INNER TUBE 3.0m / 10 ft	14-01-024
35	BWL RING STOP	14-01-026
36	BWL CORE LIFTER FLUTED	14-01-027A
36	BWL CORE LIFTER SLOTTED	14-01-027B
37	BWL CORE LIFTER CASE	14-01-028
38	BWL LOCKING COUPLING (FH)	14-01-029
39	BWL ADAPTER COUPLING	14-01-030
40	BWL RING LANDING	14-01-031
41	BWL OUTER TUBE 1.5m / 5 ft	14-01-033
41	BWL OUTER TUBE 3.0m / 10 ft	14-01-032
42	BWL STABILIZER RING	14-01-034
43	BWL CB THREAD PROTECTOR	14-01-035