


## BWL-O CORE BARREL

KUVAWALA 'O' WIRELINE CORE BARRELS WITH LANDING INDICATOR.

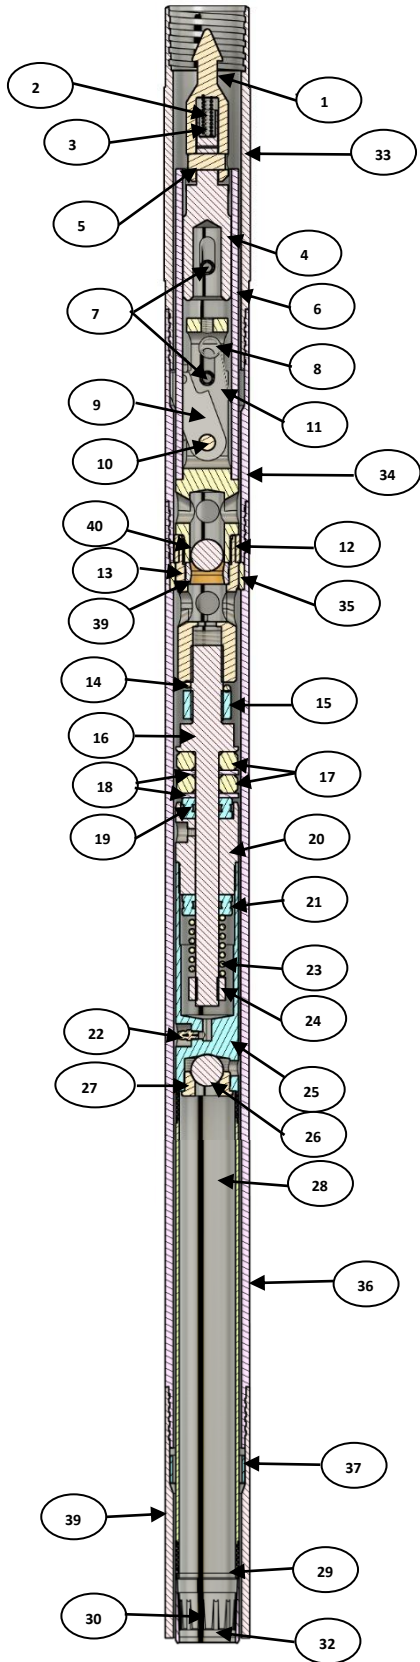

	ITEM DESCRIPTION	PART NUMBERS
1-38	BWL-O CORE BARREL 3.0m / 10 ft	14-00-700
1-38	BWL-O CORE BARREL 1.5m / 5 ft	14-00-710
1-33	BWL-O INNER TUBE ASSEMBLY 3.0m / 10 ft	14-00-705
1-33	BWL-O INNER TUBE ASSEMBLY 1.5m / 5 ft	14-00-715
1-29	BWL-O HEAD ASSEMBLY	14-00-720
1	SPEARHEAD POINT	16-01-001C
2	KNUCKLE HEAD COMPRESSION SPRING	16-01-004
3	DETENT PLUNGER	16-01-003
4	BWL POINT BODY	14-01-002
5	SOLID PIN 7/16" x 1 1/8"	16-01-005
6	BWL-O CASE LATCH	14-01-046
7	SPRING DOWELL 3/8" X 1 5/8" - 2 NOS.	14-01-011
8	BWL LATCH SPRING	14-01-009
9	BWL LATCH - 2 NOS.	14-01-008
10	SOLID PIN 3/8" X 1 5/8"	14-01-010
11	BWL-LL UPPER BODY LATCH	14-05-007
12	BWL-LL LANDING SHOULDER	14-05-015
13	BWL-LL LOWER BODY LATCH	14-05-013
14	BWL SPRING WASHER	14-03-010
15	BWL HEX NUT	14-01-013
16	BWL ADJUSTING SPINDLE ASSEMBLY	14-01-012
17	BWL SHUT OFF VALVE - 2 NOS.	14-01-014
18	BWL VALVE ADJUSTING WASHER - 2 NOS.	14-01-015
19	BWL THRUST BEARING	14-00-016
20	BWL BEARING SPINDLE	14-01-018
21	BWL HANGER BEARING	14-00-016
22	GREASE FITTING	16-01-019
23	BWL COMPRESSION SPRING	14-01-021
24	BWL NYLOCK NUT, 5/8" UNC	14-01-022
25	BWL INNER TUBE CAP ASSEMBLY	14-01-023
26	STAINLESS STEEL BALL 22 mm	16-05-017
27	BWL INNER TUBE CAP VALVE BODY	14-01-023A
28	BWL INNER TUBE 1.5m / 5 ft	14-01-025
28	BWL INNER TUBE 3.0m / 10 ft	14-01-024
29	BWL RING STOP	14-01-026
30	BWL CORE LIFTER FLUTED	14-01-027A
31	BWL CORE LIFTER SLOTTED	14-01-027B
32	BWL CORE LIFTER CASE	14-01-028
33	BWL LOCKING COUPLING (HF)	14-01-029
34	BWL ADAPTER COUPLING	14-01-030
35	BWL RING LANDING	14-01-031
36	BWL OUTER TUBE 1.5m / 5 ft	14-01-033
36	BWL OUTER TUBE 3.0m / 10 ft	14-01-032
37	BWL STABILIZER RING	14-01-034
38	BWL CB THREAD PROTECTOR	14-01-035
39	LANDING INDICATOR BUSH	16-05-015
40	STAINLESS STEEL BALL 22 mm	16-05-017