



2025

# Underground In Hole Tools Catalogue



Version 1.1.925

***KUVAWALA CORE DRILL EQPT. PVT. LTD.***

 
**QUALITY RUNS DEEP**

[www.kuvawalacoredrill.com](http://www.kuvawalacoredrill.com)

# INDEX


- ❖ PUMP-IN WIRELINE CORE BARRELS
- ❖ PUMP-IN WIRELINE OVERSHOTS
- ❖ LOADING CHAMBERS
- ❖ WATER SWIVELS

## BUWL-LL CORE BARREL

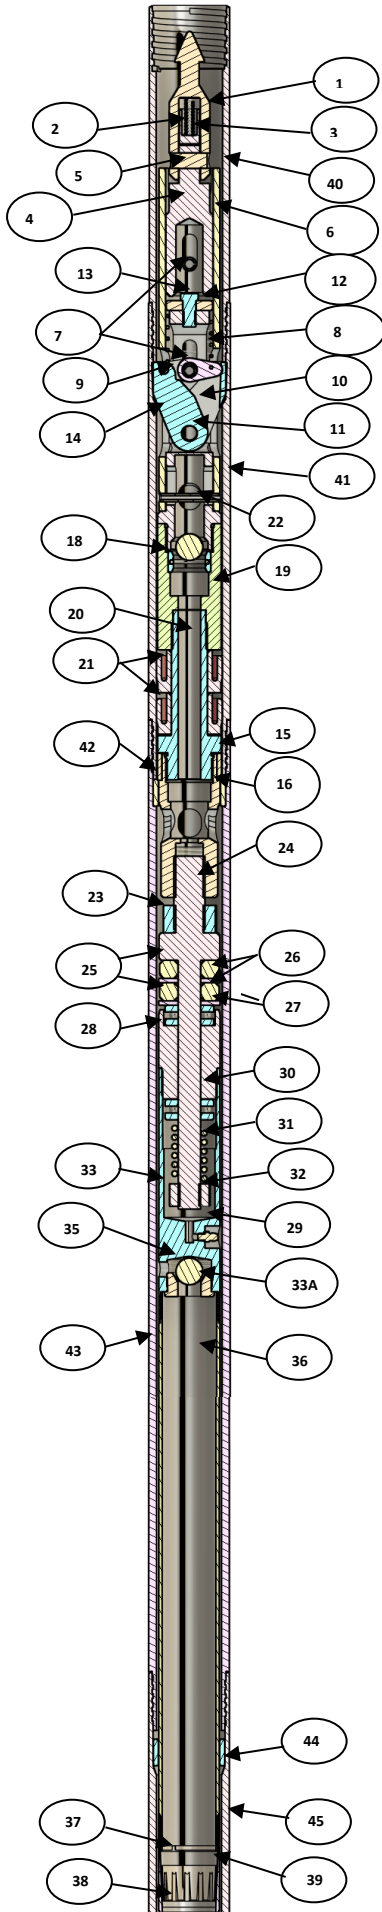


|      | ITEM DESCRIPTION                         | PART NUMBERS |
|------|------------------------------------------|--------------|
| 1-39 | BUWL-LL CORE BARREL 3.0m / 10 ft         | 15-10-100    |
| 1-39 | BUWL-LL CORE BARREL 1.5m / 5 ft          | 15-10-110    |
| 1-33 | BUWL-LL INNER TUBE ASSEMBLY 3.0m / 10 ft | 15-10-120    |
| 1-33 | BUWL-LL INNER TUBE ASSEMBLY 1.5m / 5 ft  | 15-10-130    |
| 1-29 | BUWL-LL HEAD ASSEMBLY                    | 15-10-140    |
| 1    | SPEARHEAD POINT                          | 16-01-001    |
| 2    | KNUCKLE HEAD COMPRESSION SPRING          | 16-01-004    |
| 3    | DETENT PLUNGER                           | 16-01-003    |
| 4    | BWL POINT BODY                           | 14-01-002    |
| 5    | SOLID PIN 7/16" x 1 1/8"                 | 16-01-005    |
| 6    | BUWL-LL CASE LATCH                       | 15-13-001    |
| 7    | BWL SPRING DOWELL 3/8" X 1 5/8" - 2 NOS. | 14-01-011    |
| 8    | BWL-LL LATCH COMPRESSION SPRING          | 15-03-002    |
| 9    | BWL-LL LINK - 2 NOS.                     | 14-05-009    |
| 10   | BWL-LL LATCH - 2 NOS.                    | 14-05-008    |
| 11   | BWL SOLID PIN 3/8" X 1 1/2"              | 14-01-010    |
| 12   | BWL-LL WASHER                            | 14-05-011    |
| 13   | WL-LL HEX BOLT 3/8" UNC                  | 16-05-010    |
| 14   | BUWL-LL UPPER BODY LATCH                 | 15-13-002    |
| 15   | BWL-LL LANDING SHOULDER                  | 14-05-015    |
| 16   | BWL-LL LOWER BODY LATCH                  | 14-05-013    |
| 18   | LANDING INDICATOR BUSH                   | 16-05-015    |
| 19   | BUWL-LL ADAPTER                          | 15-13-004    |
| 20   | BUWL-LL SEAL SEAT                        | 15-13-005    |
| 21   | BUWL-LL PUMP-IN SEAL                     | 15-13-006    |
| 22   | BUWL-LL SPRING DOWELL 1/2" X 1 1/2"      | 15-13-007    |
| 23   | BWL HEX NUT 7/8" 9TPI                    | 14-01-013    |
| 24   | BWL ADJUSTING SPINDLE ASSEMBLY           | 14-01-012    |
| 25   | BWL SHUT OFF VALVE - 2 NOS.              | 14-01-014    |
| 26   | BWL VALVE ADJUSTING WASHER - 2 NOS.      | 14-01-015    |
| 27   | BWL THRUST BEARING                       | 14-00-016    |
| 28   | BWL BEARING SPINDLE                      | 14-01-018    |
| 29   | GREASE FITTING                           | 16-01-019    |
| 30   | BWL HANGER BEARING                       | 14-00-016    |
| 31   | BWL COMPRESSION SPRING                   | 14-01-021    |
| 32   | BWL NYLOCK NUT, 5/8" UNC                 | 14-01-022    |
| 33   | BWL-LL INNER TUBE CAP ASSEMBLY           | 14-05-018    |
| 33A  | BWL-LL INNER TUBE CAP VALVE BODY         | 14-05-019    |
| 35   | STAINLESS STEEL BALL 22 mm               | 16-05-017    |
| 36   | BWL INNER TUBE 1.5m / 5 ft               | 14-01-025    |
| 36   | BWL INNER TUBE 3.0m / 10 ft              | 14-01-024    |
| 37   | BWL RING STOP                            | 14-01-026    |
| 38   | BWL CORE LIFTER FLUTED                   | 14-01-027A   |
| 38   | BWL CORE LIFTER SLOTTED                  | 14-01-027B   |
| 39   | BWL CORE LIFTER CASE                     | 14-01-028    |
| 40   | BWL LOCKING COUPLING (FH)                | 14-01-029    |
| 41   | BUWL-LL ADAPTER COUPLING                 | 15-13-012    |
| 42   | BWL RING LANDING                         | 14-01-031    |
| 43   | BWL OUTER TUBE 1.5m / 5 ft               | 14-01-033    |
| 43   | BWL OUTER TUBE 3.0m / 10 ft              | 14-01-032    |
| 44   | BWL STABILIZER RING                      | 14-01-034    |
| 45   | BWL CB THREAD PROTECTOR                  | 14-01-035    |
| 46   | BWL RING LANDING                         | 14-01-031    |

**NUWL-LL CORE BARREL**

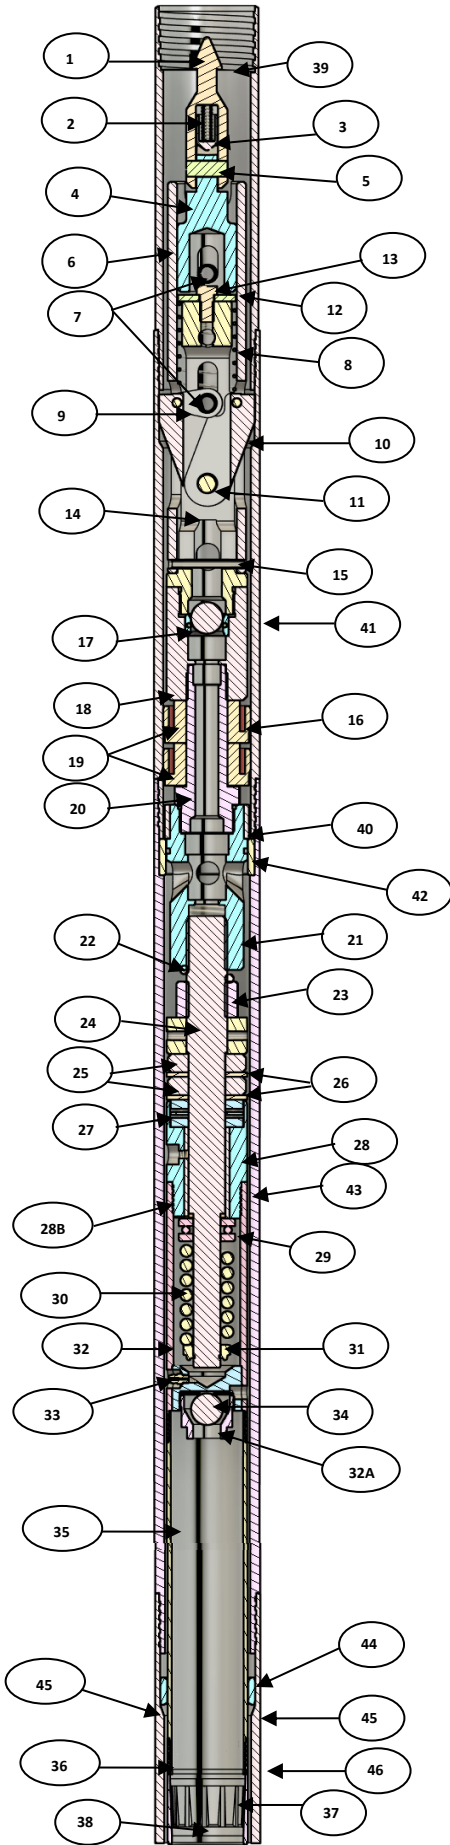 


|      | ITEM DESCRIPTION                      | PART NUMBERS |
|------|---------------------------------------|--------------|
| 1-46 | NUWL-LL CORE BARREL 3.0m/10ft         | 16-00-300    |
| 1-46 | NUWL-LL CORE BARREL 1.5m/5ft          | 16-00-310    |
| 1-39 | NUWL-LL INNER TUBE ASSEMBLY 3.0m/10ft | 16-00-320    |
| 1-39 | NUWL-LL INNER TUBE ASSEMBLY 1.5m/5ft  | 16-00-330    |
| 1-34 | NUWL-LL HEAD ASSEMBLY                 | 16-00-340    |
| 1    | SPEARHEAD POINT                       | 16-01-001    |
| 2    | KNUCKLE HEAD COMPRESSION SPRING       | 16-01-004    |
| 3    | DETENT PLUNGER                        | 16-01-003    |
| 4    | NWL POINT BODY                        | 16-01-002    |
| 5    | SOLID PIN 7/16" x 1"                  | 16-01-005    |
| 6    | NUWL-LL CASE LATCH                    | 16-03-051    |
| 7    | SPRING DOWELL 1/2" x 2" - 2 NOS.      | 16-01-011    |
| 8    | NWL-LL LATCH COMPRESSION SPRING       | 16-05-012    |
| 9    | NWL-LL LINK - 2 NOS.                  | 16-05-009    |
| 10   | NWL-LL LATCH - 2 NOS.                 | 16-05-008    |
| 11   | SOLID PIN 1/2" x 1 1/2"               | 16-10-010    |
| 12   | NWL-LL WASHER                         | 16-05-011    |
| 13   | NWL-LL HEX BOLT                       | 16-05-010    |
| 14   | NUWL-LL UPPER BODY LATCH              | 16-03-053    |
| 15   | NUWL-LL SPRING DOWELL 1/2" X 1 1/2"   | 16-03-054    |
| 17   | LANDING INDICATOR BUSH                | 16-05-015    |
| 18   | NUWL-LL ADAPTER                       | 16-03-057    |
| 19   | NUWL PUMP-IN SEAL - 2 NOS.            | 16-03-058    |
| 20   | NUWL-LL SEAL SEAT                     | 16-03-059    |
| 21   | NWL-LL LOWER BODY LATCH               | 16-03-013    |
| 22   | NWL SPRING WASHER                     | 16-05-035    |
| 23   | NWL HEX NUT                           | 16-01-013    |
| 24   | NWL ADJUSTING SPINDLE ASSEMBLY        | 16-01-012    |
| 25   | NWL SHUT OFF VALVE - 2 NOS.           | 16-01-014    |
| 26   | NWL VALVE ADJ WASHER - 2 NOS.         | 16-01-015    |
| 27   | NWL THRUST BEARING                    | 16-03-021    |
| 28   | NWL-LL BEARING SPINDLE K20            | 16-01-052    |
| 29   | NWL HANGER BEARING                    | 16-03-025    |
| 30   | NWL COMPRESSION SPRING                | 16-01-021    |
| 31   | NYLOCK NUT , 3/4" UNC                 | 16-01-022    |
| 32   | NWL-LL INNER TUBE CAP ASSEMBLY        | 16-05-018    |
| 32A  | NWL-LL INNER TUBE CAP VALVE BODY      | 16-05-019    |
| 33   | GREASE FITTING                        | 16-01-019    |
| 34   | STAINLESS STEEL BALL 22 mm            | 16-05-017    |
| 35   | NWL INNER TUBE 1.5m / 5 ft            | 16-01-025    |
| 35   | NWL INNER TUBE 3.0m/ 10 ft            | 16-01-024    |
| 36   | NWL RING STOP                         | 16-01-026    |
| 37   | NWL CORE LIFTER FLUTTED               | 16-01-027A   |
| 37   | NWL CORE LIFTER SLOTTED               | 16-01-027B   |
| 38   | NWL CORE LIFTER CASE                  | 16-01-028    |
| 39   | NWL LOCKING COUPLING (FH)             | 16-02-100    |
| 40   | NWL LANDING SHOULDER                  | 16-05-014    |
| 41   | NUWL-LL ADAPTER COUPLING              | 16-02-008    |
| 42   | NWL RING LANDING                      | 16-01-031    |
| 43   | NWL OUTER TUBE 1.5m / 5 ft            | 16-01-033    |
| 43   | NWL OUTER TUBE 3.0m/ 10 ft            | 16-01-032    |
| 44   | NWL STABILIZER RING                   | 16-01-034    |
| 45   | NWL CB THREAD PROTECTOR               | 16-01-035    |
| 46   | NWL LOADING SLEEVE                    | 16-02-009    |

## HUWL-LL CORE BARREL

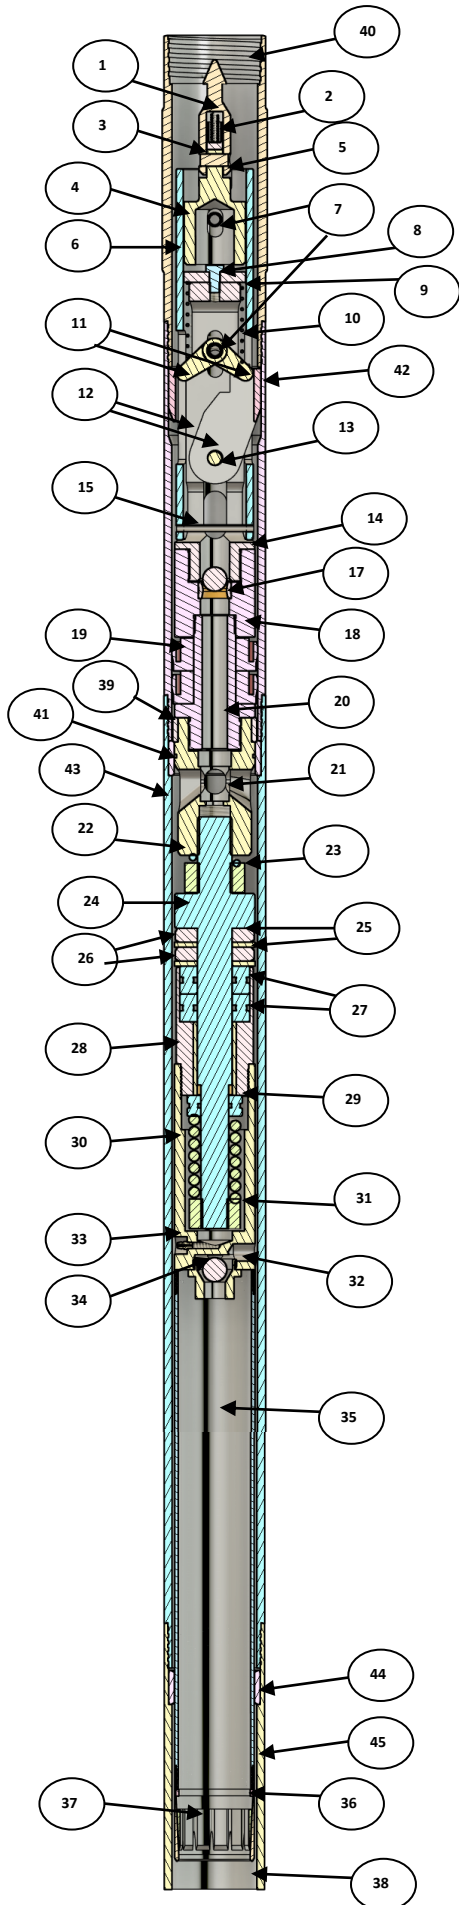 


|      | ITEM DESCRIPTION                      | PART NUMBERS |
|------|---------------------------------------|--------------|
| 1-46 | HUWL-LL CORE BARREL 3.0m/10ft         | 18-00-300    |
| 1-46 | HUWL-LL CORE BARREL 1.5m/5ft          | 18-00-310    |
| 1-39 | HUWL-LL INNER TUBE ASSEMBLY 3.0m/10ft | 18-00-320    |
| 1-39 | HUWL-LL INNER TUBE ASSEMBLY 1.5m/5ft  | 18-00-330    |
| 1-34 | HUWL-LL HEAD ASSEMBLY                 | 18-00-340    |
| 1    | SPEARHEAD POINT                       | 16-01-001    |
| 2    | KNUCKLE HEAD COMPRESSION SPRING       | 16-01-004    |
| 3    | DETENT PLUNGER                        | 16-01-003    |
| 4    | HWL POINT BODY                        | 18-01-002    |
| 5    | SOLID PIN 7/16" x 1 1/8"              | 16-01-005    |
| 6    | HUWL-LL CASE LATCH                    | 18-13-002    |
| 7    | SPRING DOWELL 1/2" x 2 3/4" - 2 NOS.  | 18-01-011    |
| 8    | WL-LL HEX BOLT                        | 16-05-010    |
| 9    | HWL-LL WASHER                         | 18-05-011    |
| 10   | HWL-LL LATCH COMPRESSION SPRING       | 18-05-012    |
| 11   | HWL-LL LINK - 2 NOS.                  | 18-05-009    |
| 12   | HWL-LL LATCH - 2 NOS.                 | 18-05-008    |
| 13   | HWL SOLID PIN 1/2" x 1 1/2"           | 18-03-006    |
| 14   | HUWL-LL UPPER BODY LATCH              | 18-13-003    |
| 15   | HUWL-LL SPRING DOWELL 1/2" x 2 1/2"   | 18-13-011    |
| 17   | LANDING INDICATOR BUSH                | 16-05-015    |
| 18   | HUWL-LL ADAPTER                       | 18-13-013    |
| 19   | HUWL PUMP-IN SEAL - 2 NOS.            | 18-13-014    |
| 20   | HUWL-LL SEAL SEAT                     | 18-13-015    |
| 21   | HWL-LL LOWER BODY LATCH               | 18-05-013    |
| 22   | HWL SPRING WASHER                     | 18-05-035    |
| 23   | HWL HEX NUT                           | 18-01-013    |
| 24   | HWL ADJUSTING SPINDLE ASSEMBLY        | 18-01-012    |
| 25   | HWL SHUT OFF VALVE - 2 NOS.           | 18-01-014    |
| 26   | HWL VALVE ADJ WASHER - 2 NOS.         | 18-01-015    |
| 27   | HWL THRUST BEARING - 2 NOS            | 18-01-016    |
| 28   | HWL-LL BEARING SPINDLE K20            | 18-01-052    |
| 29   | HWL HANGER BEARING                    | 16-01-017    |
| 30   | HWL COMPRESSION SPRING                | 18-01-021    |
| 31   | NYLOCK NUT, 1" UNC                    | 18-01-022    |
| 32   | HWL-LL INNER TUBE CAP ASSEMBLY        | 16-03-028    |
| 32A  | HWL-LL INNER TUBE CAP VALVE BODY      | 18-05-019    |
| 33   | GREASE FITTING                        | 16-01-019    |
| 34   | STAINLESS STEEL BALL 22 mm            | 16-05-017    |
| 35   | HWL INNER TUBE 1.5m / 5 ft            | 18-01-025    |
| 35   | HWL INNER TUBE 3.0m/ 10 ft            | 18-01-024    |
| 36   | HWL RING STOP                         | 18-01-026    |
| 37   | HWL CORE LIFTER FLUTTED               | 18-01-027    |
| 37   | HWL CORE LIFTER SLOTTED               | 18-01-027B   |
| 38   | HWL CORE LIFTER CASE                  | 18-01-028    |
| 39   | HWL-LL LANDING SHOULDER               | 18-05-014    |
| 40   | HWL LOCKING COUPLING (FH)             | 18-01-101    |
| 41   | HWL RING LANDING                      | 18-01-031    |
| 42   | HUWL-LL ADAPTER COUPLING              | 18-02-008    |
| 43   | HWL OUTER TUBE 1.5m / 5 ft            | 18-01-033    |
| 43   | HWL OUTER TUBE 3.0m/ 10 ft            | 18-01-032    |
| 44   | HWL STABILIZER RING                   | 18-01-034    |
| 45   | HWL CB THREAD PROTECTOR               | 18-01-035    |
| 46   | HWL LOADING SLEEVE                    | 18-02-009    |

**BUWL PUMP-IN OVERSHOT**

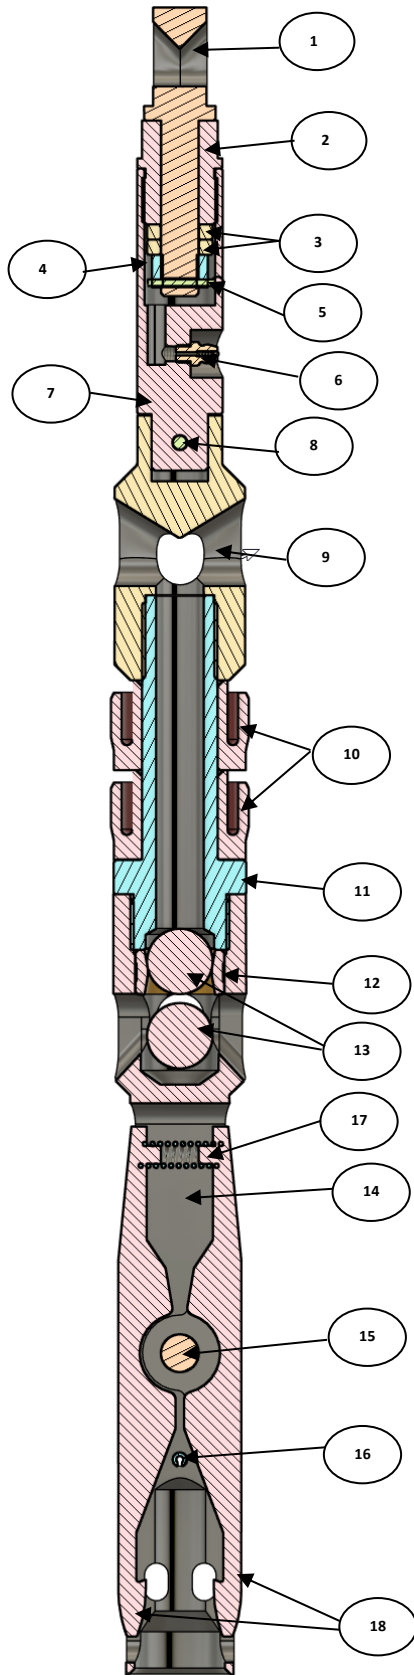 


|      | ITEM DESCRIPTION                          | PART NUMBERS |
|------|-------------------------------------------|--------------|
| 1-18 | BUWL PUMP-IN OVERSHOT                     | 24-00-200    |
| 1    | OVERSHOT EYE BOLT                         | 26-00-001    |
| 2    | CABLE SWIVEL COLLAR                       | 26-00-002    |
| 3    | OVERSHOT BRASS BEARING WASHER<br>- 2 NOS. | 26-00-003    |
| 4    | OVERSHOT SLOTTED NUT                      | 26-00-004    |
| 5    | OVERSHOT COTTER PIN                       | 26-00-005    |
| 6    | GREASE FITTING                            | 16-01-019    |
| 7    | UG OS CABLE SWIVEL BODY                   | 26-00-033    |
| 8    | BWL OS SPRING DOWELL 3/16" X 1 15/32"     | 24-00-014    |
| 9    | BUWL OS UPPER BODY                        | 24-00-035    |
| 10   | BUWL PUMP-IN LIP SEAL - 2 NOS.            | 15-13-006    |
| 11   | BUWL OS SEAL SEAT                         | 24-00-032    |
| 12   | LANDING INDICATOR BUSH                    | 16-05-015    |
| 13   | STAINLESS STEEL BALL 22MM - 2 NOS.        | 16-05-017    |
| 14   | BUWL OS HEAD                              | 24-00-033    |
| 15   | BWL OS SOLID PIN 1/2" X 1-15/16"          | 24-00-013    |
| 16   | BWL OS SPRING DOWELL 3/16" X 1-15/32"     | 24-00-014    |
| 17   | LIFTING DOG COMPRESSION SPRING            | 26-00-018    |
| 18   | LIFTING DOG B - 2 NOS.                    | 24-00-011    |

## NUWL PUMP-IN OVERSHOT

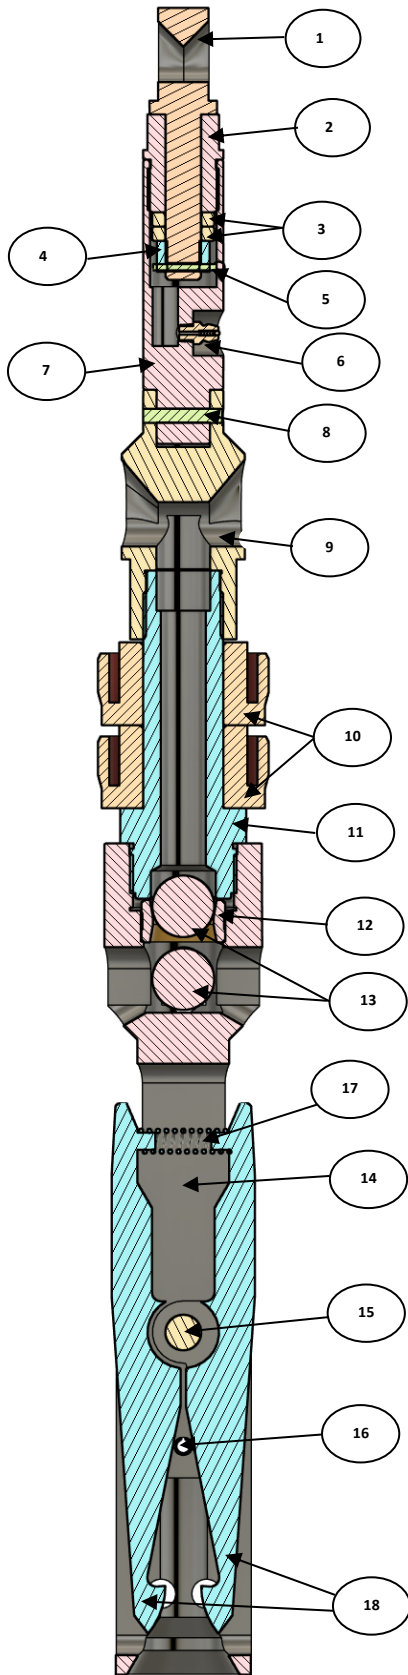 


|      | ITEM DESCRIPTION                            | PART NUMBERS |
|------|---------------------------------------------|--------------|
| 1-18 | NUWL PUMP-IN OVERSHOT                       | 16-00-450    |
| 1    | OVERSHOT EYE BOLT                           | 26-00-001    |
| 2    | CABLE SWIVEL COLLAR                         | 26-00-002    |
| 3    | OVERSHOT BRASS BEARING WASHER<br>- 2 NOS.   | 26-00-003    |
| 4    | OVERSHOT SLOTTED NUT                        | 26-00-004    |
| 5    | OVERSHOT COTTER PIN                         | 26-00-005    |
| 6    | GREASE FITTING                              | 16-01-019    |
| 7    | UG OS CABLE SWIVEL BODY                     | 26-00-033    |
| 8    | UG OS SPRING DOWELL SHEAR 3/16" X 1<br>1/8" | 26-00-033    |
| 9    | NUWL OS UPPER BODY                          | 26-00-035    |
| 10   | NUWL PUMP-IN SEAL - 2 NOS.                  | 16-03-058    |
| 11   | NUWL SEAL SEAT                              | 26-00-036    |
| 12   | LANDING INDICATOR BUSH                      | 16-05-015    |
| 13   | STAINLESS STEEL BALL 22MM - 2 NOS.          | 16-05-017    |
| 14   | NUWL OS HEAD                                | 26-00-031    |
| 15   | NWL OS SOLID PIN 1/2" X 1-15/16"            | 26-00-020    |
| 16   | NWL OS SPRING DOWELL 1/4" X 1-3/4"          | 26-00-021    |
| 17   | LIFTING DOG COMP. SPRING                    | 26-00-018    |
| 18   | N LIFTING DOG - 2 NOS.                      | 26-00-019    |

**HUWL PUMP-IN OVERSHOT**

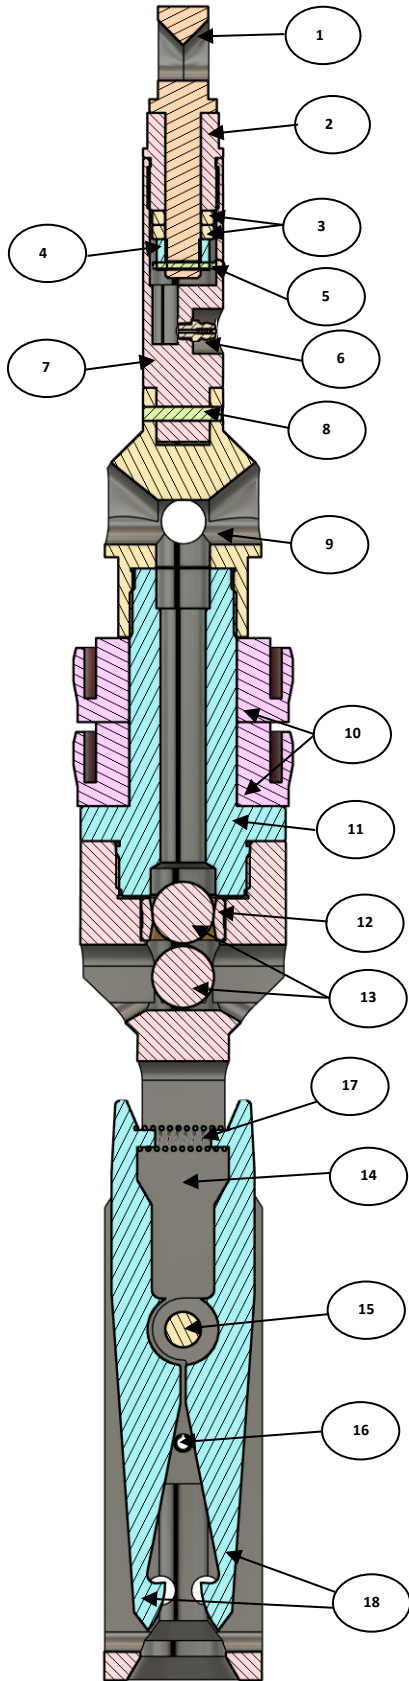 


|      | ITEM DESCRIPTION                          | PART NUMBERS |
|------|-------------------------------------------|--------------|
| 1-18 | HUWL PUMP-IN OVERSHOT                     | 28-00-200    |
| 1    | OVERSHOT EYE BOLT                         | 26-00-001    |
| 2    | CABLE SWIVEL COLLAR                       | 26-00-002    |
| 3    | OVERSHOT BRASS BEARING WASHER<br>- 2 NOS. | 26-00-003    |
| 4    | OVERSHOT SLOTTED NUT                      | 26-00-004    |
| 5    | OVERSHOT COTTER PIN                       | 26-00-005    |
| 6    | GREASE FITTING                            | 16-01-019    |
| 7    | UG OS CABLE SWIVEL BODY                   | 26-00-034    |
| 8    | UG OS SPRING DOWELL 3/16" X 1 1/8"        | 26-00-033    |
| 9    | HUWL OS UPPER BODY                        | 28-00-029    |
| 10   | HUWL PUMP-IN SEAL - 2 NOS.                | 18-13-014    |
| 11   | HUWL OS SEAL SEAT                         | 28-00-030    |
| 12   | LANDING INDICATOR BUSH                    | 16-05-015    |
| 13   | STAINLESS STEEL BALL 22MM - 2 NOS.        | 16-05-017    |
| 14   | HUWL OS HEAD                              | 28-00-031    |
| 15   | HWL SOLID PIN 1/2" X 15/16"               | 18-03-006    |
| 16   | HUWL SPRING DOWELL 1/4" X 2-1/8"          | 28-00-028    |
| 17   | LIFTING DOG COMPRESSION SPRING            | 26-00-018    |
| 18   | LIFTING DOG N - 2 NOS.                    | 26-00-019    |

**BUWL LOADING CHAMBER**

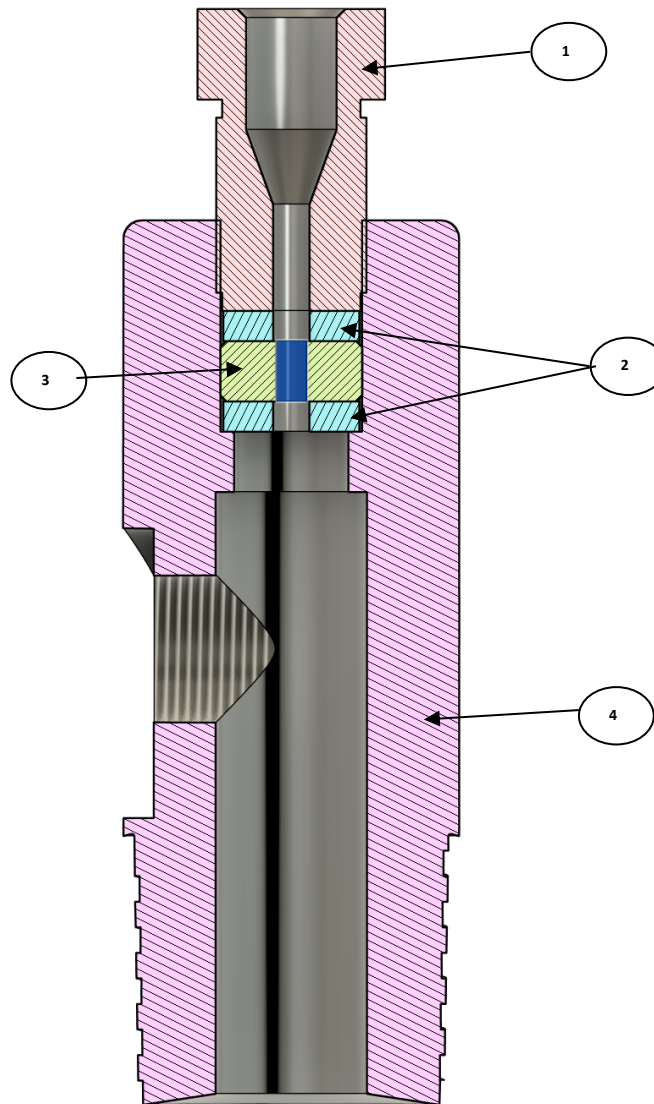 


|     | ITEM DESCRIPTION                            | PART NUMBERS |
|-----|---------------------------------------------|--------------|
| 1-4 | BUWL LOADING CHAMBER                        | 55-00-100    |
| 1   | LOADING CHAMBER PACKING PLUG                | 55-20-004    |
| 2   | LOADING CHAMBER CABLE GUIDE WASHER – 2 NOS. | 55-20-005    |
| 3   | LOADING CHAMBER CABLE PACKING               | 55-20-006    |
| 4   | BUWL LOADING CHAMBER BODY                   | 55-00-150    |

**NUWL LOADING CHAMBER**

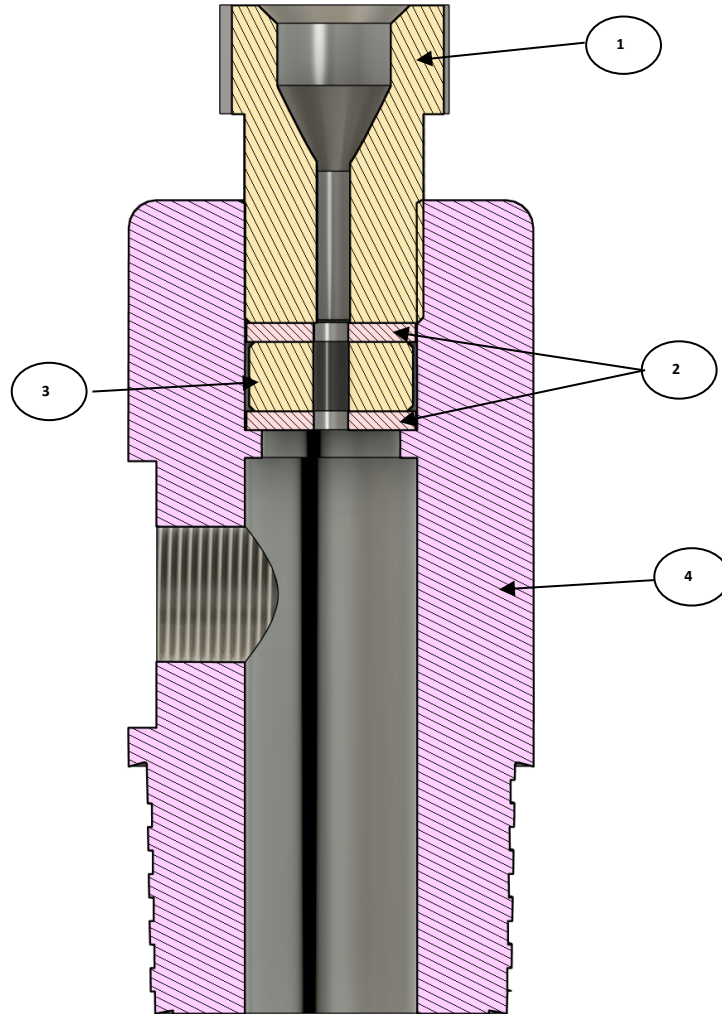 


|     | ITEM DESCRIPTION                            | PART NUMBERS |
|-----|---------------------------------------------|--------------|
| 1-4 | NUWL LOADING CHAMBER                        | 55-40-100    |
| 1   | LOADING CHAMBER PACKING PLUG                | 55-20-004    |
| 2   | LOADING CHAMBER CABLE GUIDE WASHER – 2 NOS. | 55-20-005    |
| 3   | LOADING CHAMBER CABLE PACKING               | 55-20-006    |
| 4   | NUWL LOADING CHAMBER BODY                   | 55-40-150    |

**HUWL LOADING CHAMBER**

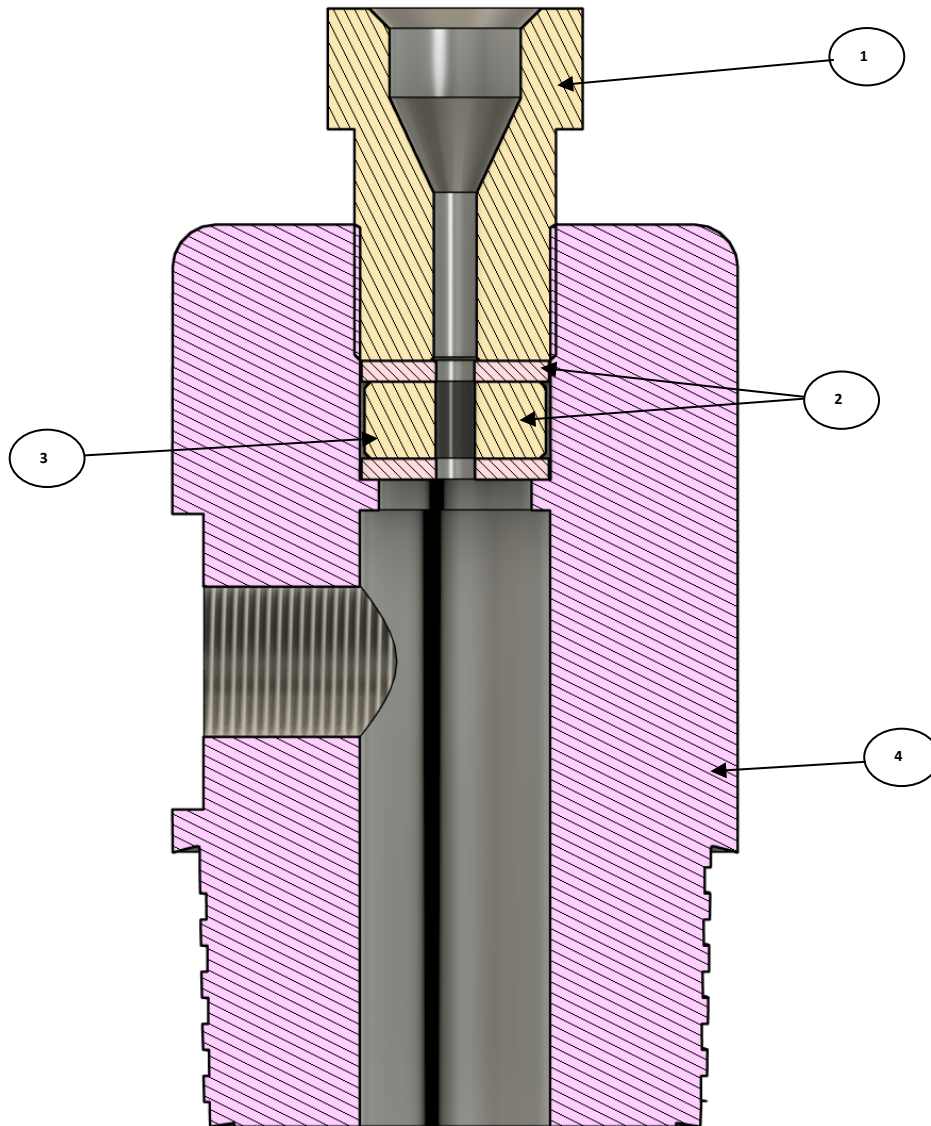 

|     | ITEM DESCRIPTION                            | PART NUMBERS |
|-----|---------------------------------------------|--------------|
| 1-4 | HUWL LOADING CHAMBER                        | 55-20-100    |
| 1   | LOADING CHAMBER PACKING PLUG                | 55-20-004    |
| 2   | LOADING CHAMBER CABLE GUIDE WASHER - 2 NOS. | 55-20-005    |
| 3   | LOADING CHAMBER CABLE PACKING               | 55-20-006    |
| 4   | HUWL LOADING CHAMBER BODY                   | 55-20-150    |

**UNDERGROUND COMPACT PLUS WATER SWIVEL**

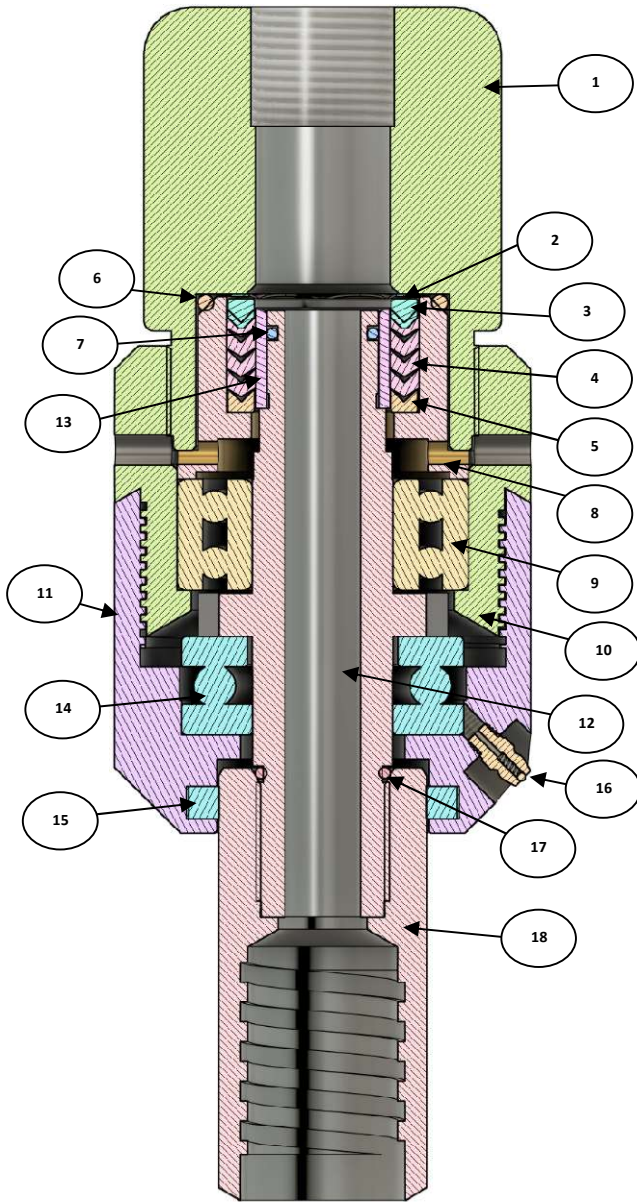 

|      | ITEM DESCRIPTION              | PART NUMBERS |
|------|-------------------------------|--------------|
| 1-18 | U/G COMPACT PLUS WATER SWIVEL | 32-00-200    |
| 1    | SWIVEL CAP (1" NPT)           | 32-01-001    |
| 2    | WAVE WASHER                   | 32-00-005    |
| 3    | WASHER MALE                   | 32-00-002    |
| 4    | GASKET SET                    | 32-00-005    |
| 5    | WASHER FEMALE                 | 32-00-004    |
| 6    | O-RING                        | 32-00-006    |
| 7    | O-RING                        | 32-00-007    |
| 8    | U/G WS PACKING HOUSING        | 32-00-009    |
| 9    | BALL BEARING                  | 32-00-011    |
| 10   | UPPER SWIVEL HOUSING          | 32-00-014    |
| 11   | LOWER SWIVEL HOUSING          | 32-00-015    |
| 12   | SPINDLE                       | 32-00-010    |
| 13   | SPINDLE WEAR BUSH             | 32-00-008    |
| 14   | THRUST BEARING                | 32-00-012    |
| 15   | SPINDLE FELT RING             | 32-00-016    |
| 16   | GREASE FITTING                | 16-03-024    |
| 17   | O-RING                        | 32-00-013    |
| 18   | AW ADAPTOR                    | 32-00-017    |



## **KUVAWALA CORE DRILL EQPT. PVT. LTD**

Plot No. 68 & 69 , Ramtekdi Industrial Estate , Hadapsar , Pune 411013. INDIA

TEL : +919822025334

E-MAIL : [hmk@kuvawalacoredrill.com](mailto:hmk@kuvawalacoredrill.com)

[www.kuvawalacoredrill.com](http://www.kuvawalacoredrill.com)