


N3WL-O CORE BARREL

KUVAWALA 'O' WIRELINE CORE BARRELS WITH LANDING INDICATOR.

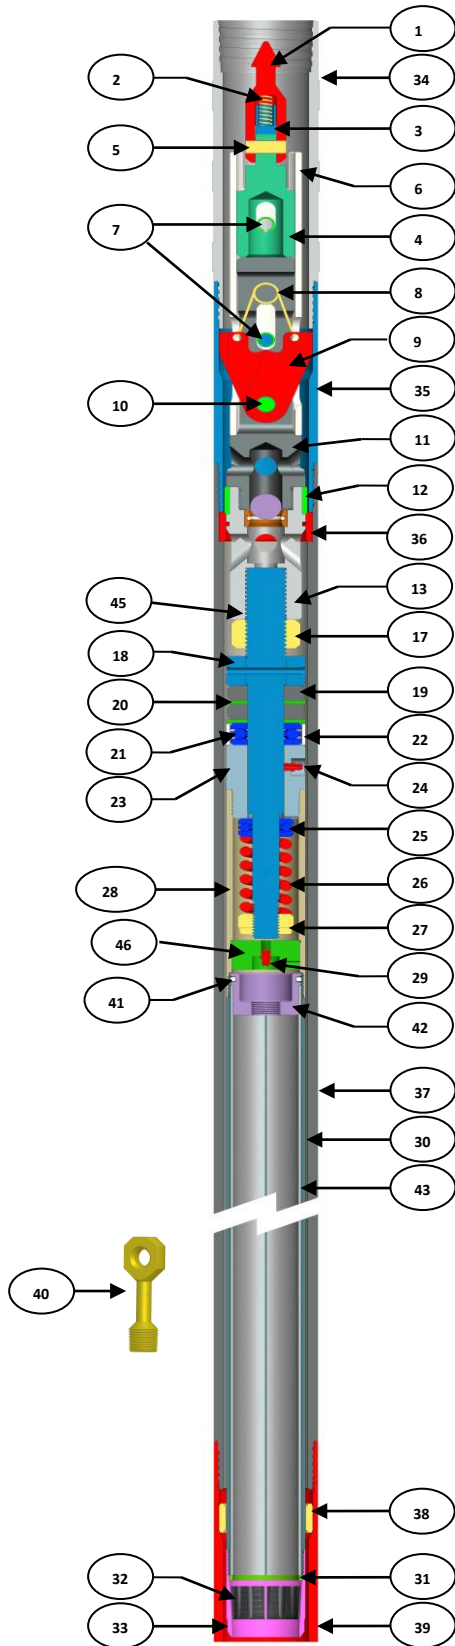

	ITEM DESCRIPTION	PART NUMBERS
1-44	N3WL-O CORE BARREL 3.0m/10ft	16-00-300
1-44	N3WL-O CORE BARREL 1.5m/5ft	16-00-310
1-33	N3WL-O INNER TUBE ASSEMBLY 3.0m/10ft	16-00-305
1-33	N3WL-O INNER TUBE ASSEMBLY 1.5m/5ft	16-00-315
1-29	NWL-O HEAD ASSEMBLY	16-00-140
1	SPEARHEAD POINT	16-01-001
2	KNUCKLE HEAD COMPRESSION SPRING	16-01-004
3	DETENT PLUNGER	16-01-003
4	NWL POINT BODY	16-01-002
5	SOLID PIN 7/16" x 1 1/8"	16-01-005
6	NWL-O CASE LATCH	16-01-046
7	NWL SPRING DOWELL 1/2" x 2" - 2 NOS.	16-01-011
8	NWL LATCH SPRING	16-03-009
9	NWL LATCH - 2 NOS.	16-03-008
10	NWL SOLID PIN 1/2" x 1 1/2"	16-01-010
11	NWL-LL UPPER BODY LATCH	16-05-007
12	NWL-LL LANDING SHOULDER	16-05-014
13	NWL-LL LOWER BODY LATCH	16-05-013
17	NWL HEX NUT	16-01-013
45	NWL-LL SPRING WASHER	16-05-035
18	NWL ADJ SPINDLE ASSEMBLY	16-01-012
19	NWL SHUT OFF VALVE - 2 NOS.	16-01-014
20	NWL VALVE ADJ WASHER - 2 NOS.	16-01-015
21	NWL THRUST BEARING	16-01-017
22	NWL BEARING COVER	16-01-020
23	NWL BEARING SPINDLE	16-01-018
24	GREASE FITTING	16-01-019
25	NWL HANGER BEARING	16-01-016
26	NWL COMPRESSION SPRING	16-01-021
27	NWL NYLOCK NUT	16-01-022
28	NWL-LL INNER TUBE CAP ASSEMBLY	16-01-018
46	STAINLESS STEEL BALL 22 mm	16-03-014
29	GREASE FITTING	16-01-019
30	NWL INNER TUBE 1.5m / 5 ft	16-01-025
30	NWL INNER TUBE 3.0m/ 10 ft	16-01-024
31	N3WL RING STOP	16-01-037
32	N3WL CORE LIFTER	16-01-038
33	N3WL CORE LIFTER CASE	16-01-039
34	NWL LOCKING COUPLING (HF)	16-01-029
35	NWL ADAPTER COUPLING	16-01-030
36	NWL RING LANDING	16-01-031
37	NWL OUTER TUBE 1.5m / 5 ft	16-01-033
37	NWL OUTER TUBE 3.0m/ 10 ft	16-01-032
38	NWL STABILIZER RING	16-01-034
39	NWL CB THREAD PROTECTOR	16-01-035
40	WL 3T PISTON PLUG	16-01-040
41	N3WL O RING	16-01-041
42	N3WL CORE EJECTION PISTON	16-01-042
43	N3WL SPLIT TUBE 1.5m / 5ft	16-01-044
43	N3WL SPLIT TUBE 3.0m / 10 ft	16-01-043
44	N3WL PUMP OUT ADAPTOR	16-03-044