


## NWL-LL CORE BARREL

KUVAWALA 'LL' WIRELINE CORE BARRELS WITH LANDING INDICATOR

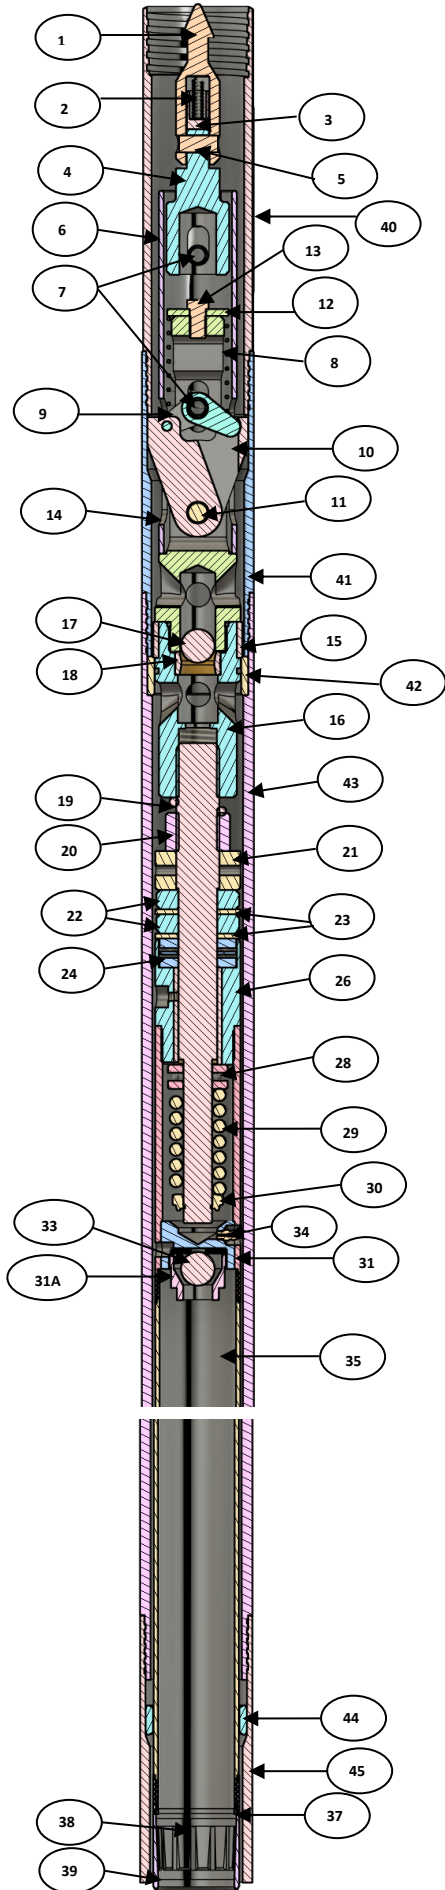

	ITEM DESCRIPTION	PART NUMBERS
1-46	NWL-LL CORE BARREL 3.0m/10ft	16-00-500
1-46	NWL-LL CORE BARREL 1.5m/5ft	16-00-510
1-39	NWL-LL INNER TUBE ASSEMBLY 3.0m/10ft	16-00-505
1-39	NWL-LL INNER TUBE ASSEMBLY 1.5m/5ft	16-00-515
1-34	NWL-LL HEAD ASSEMBLY	16-00-520
1	SPEARHEAD POINT	16-01-001
2	KNUCKLE HEAD COMPRESSION SPRING	16-01-004
3	DETENT PLUNGER	16-01-003
4	NWL POINT BODY	16-01-002
5	SOLID PIN 7/16" x 1"	16-01-005
6	NWL-LL CASE LATCH	16-05-006
7	SPRING DOWEL 1/2" x 2" - 2 NOS.	16-01-011
8	NWL-LL LATCH COMPRESSION SPRING	16-05-012
9	NWL-LL LINK - 2 NOS.	16-05-009
10	NWL-LL LATCH - 2 NOS.	16-05-008
11	NWL SOLID PIN 1/2" x 1 1/2"	16-10-010
12	NWL-LL WASHER	16-05-011
13	NWL-LL HEX BOLT	16-05-010
14	NWL-LL UPPER BODY LATCH	16-05-007
15	NWL-LL LANDING SHOULDER	16-05-014
16	NWL-LL LOWER BODY LATCH	16-05-013
17	STAINLESS STEEL BALL 22 mm	16-05-017
18	LANDING INDICATOR BUSH	16-05-015
19	NWL SPRING WASHER	16-05-035
20	NWL HEX NUT	16-01-013
21	NWL ADJUSTING SPINDLE ASSEMBLY	16-01-012
22	NWL SHUT OFF VALVE - 2 NOS.	16-01-014
23	NWL VALVE ADJ WASHER - 2 NOS.	16-01-015
24	NWL THRUST BEARING	16-01-017
26	NWL-LL BEARING SPINDLE K20	16-01-052
28	NWL HANGER BEARING	16-01-016
29	NWL COMPRESSION SPRING	16-01-021
30	NWL NYLOCK NUT	16-01-022
31	NWL-LL INNER TUBE CAP ASSEMBLY	16-05-018
31A	NWL-LL INNER TUBE CAP VALVE BODY	16-05-019
33	STAINLESS STEEL BALL 22 mm	16-05-017
34	GREASE FITTING	16-01-019
35	NWL INNER TUBE 1.5m / 5 ft	16-01-025
35	NWL INNER TUBE 3.0m / 10 ft	16-01-024
37	NWL RING STOP	16-01-026
38	NWL CORE LIFTER FLUTTED	16-01-027A
38	NWL CORE LIFTER SLOTTED	16-01-027B
39	NWL CORE LIFTER CASE	16-01-028
40	NWL LOCKING COUPLING (FH)	16-02-100
41	NWL ADAPTER COUPLING	16-01-030
42	NWL RING LANDING	16-01-031
43	NWL OUTER TUBE 1.5m / 5 ft	16-01-033
43	NWL OUTER TUBE 3.0m / 10 ft	16-01-032
44	NWL STABILIZER RING	16-01-034
45	NWL CB THREAD PROTECTOR	16-01-035